

# TOTO

**TOTO U.S.A., Inc.** 1155 Southern Road Morrow, GA 30260  
Phone : (770) 282-8686

Warranty Registration and Inquiry  
For product warranty registration, TOTO U.S.A. Inc. recommends On-Line Warranty Registration. Please visit our web site <http://www.totousa.com>. If you have questions regarding warranty policy or coverage, please contact TOTO U.S.A. Inc., Customer Service Department, 1155 Southern Road, Morrow, GA 30260 (888) 295 - 8134 or (678) 466 - 1300 when calling from outside of U.S.A.

- You are advised to record the following information to allow quick service.

Date of purchase :	Name of shop :
Date : year month day	Tel : (     )



 
# TOTO

## NEOREST LS

эксплуатация

эксплуатация

If the water does not flow due to a power outage. (→Page 56)






## NEOREST

SN8732M (MS8732CUMFG)



Благодарим вас за покупку данного изделия. Пожалуйста, ознакомьтесь с прилагаемой информацией, чтобы обеспечить безопасное использование изделия. Обязательно прочитайте данное руководство по эксплуатации перед использованием изделия и храните его в надежном месте для дальнейшего использования.
   
# Названия деталей

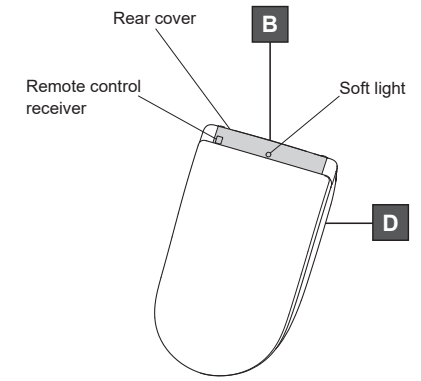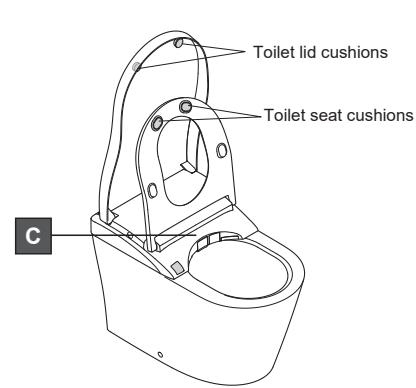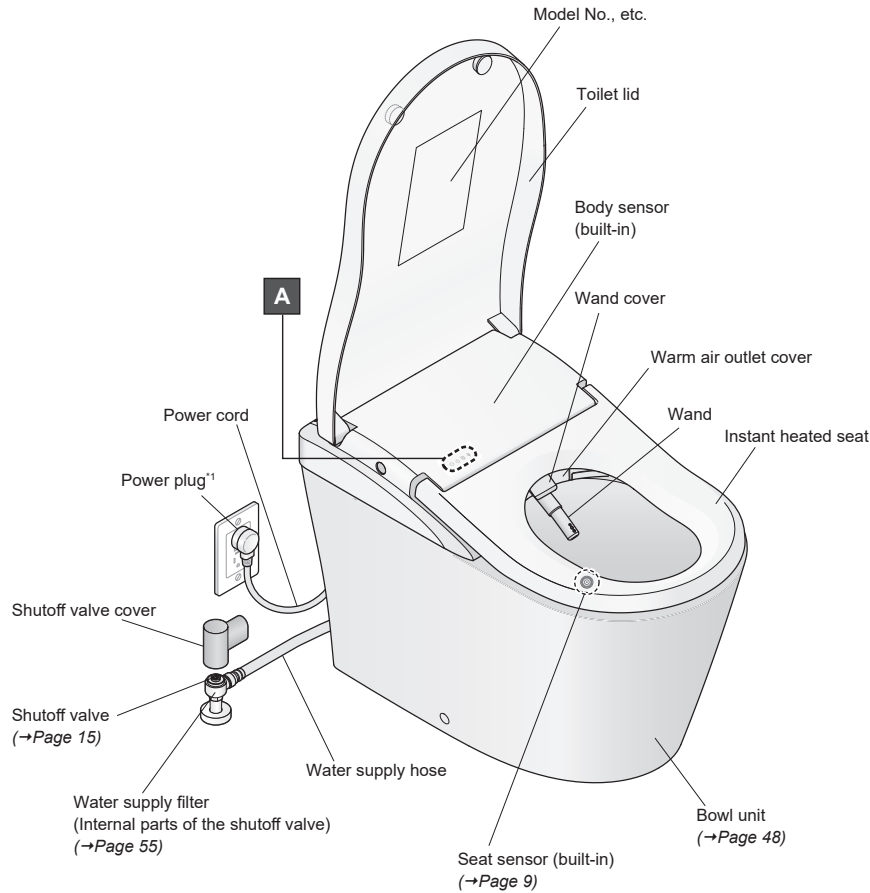

## B : Rear side of the top unit

Manual water supply cord (orange) (→Pages 56,57)      Manual water storage cord (white) (→Pages 56,57)

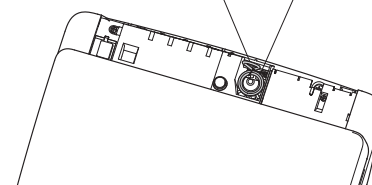 


Illustration with the rear cover removed


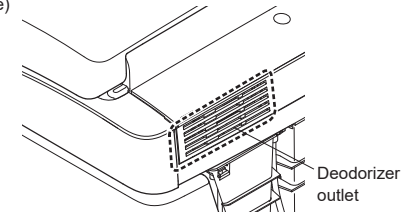 



Illustration as seen from the right rear

## A: Main display

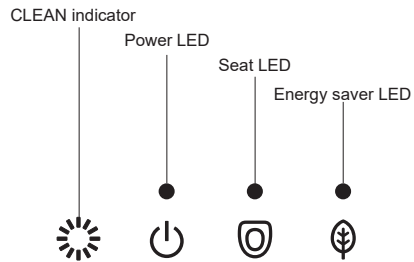 


All the CLEAN indicator and LEDs illuminate in the figure

## C : Front side of the top unit

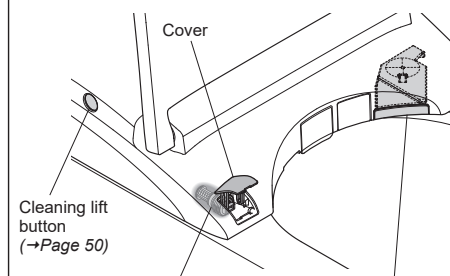 

Drain plug with water supply filter (→Page 54)      Deodorizing filter (→Page 53)

## D : Right side of the top unit

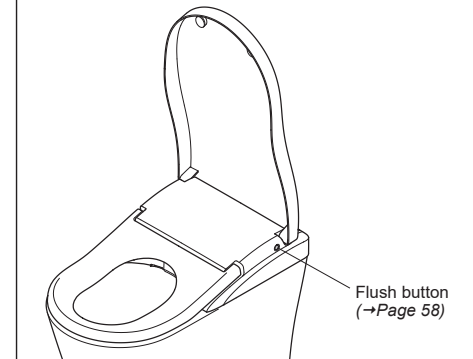 


\*1 The shape of the power plug may vary.

# ПОДГОТОВКА
 
## Using the Product for the First Time


### 1. Insert the battery

#### 1.1 Remove the remote control from the hanger.

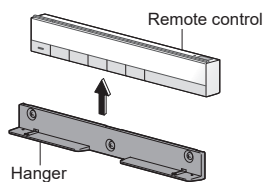

#### 1.2 Open the battery cover and insert two AA batteries. Insert batteries and close the battery cover.


##### Remote control backside

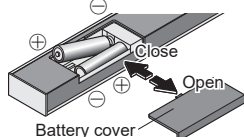

- ▶ When batteries are properly inserted, temperature levels appear on the display of the remote control (back side).

**When the temperature levels are not displayed.**  
Perform step 3 of "Language Settings".  
(→Page 40)

The display goes out when no button on the remote control is pressed for about 60 seconds or more.

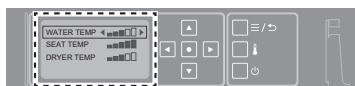

#### 1.3 Mount the remote control in the hanger.


##### About the batteries

**Use dry cell, alkaline batteries.**


Be sure to follow "Safety Precautions" to prevent the batteries from rupturing or leaking fluid. (→Pages 4, 7)

#### If the remote control is secured to prevent theft

- 1) Remove the screw from the remote control fixture.  
(2 pieces, left and right)

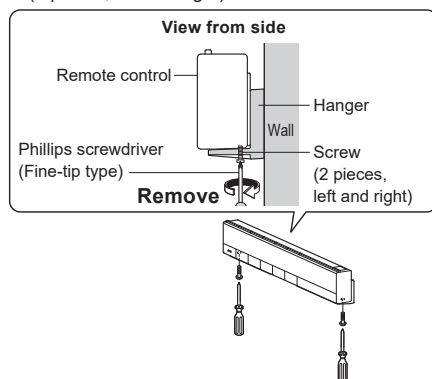

- 2) Remove the remote control from the hanger.

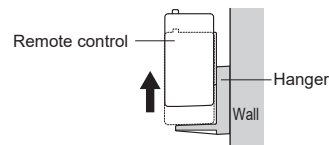

##### To secure the remote control again


**Tighten two screws on the left and right to secure it.**  
Overtightening may cause damage to parts such as the hanger.

### 2. Turn on the power

#### 2.1 Insert the power plug.

- ▶ The wand extends and then retracts.

#### 2.2 Check the "Power" LED illuminates.

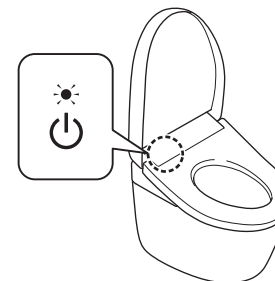

#### If the light is off

Switch "Power" to "ON" using the remote control.

##### To operate from the back of remote control

- 1) Press "Power ON/OFF" button about 3 seconds or longer.

##### To operate from the front of remote control

Recommended if the remote control is secured to prevent theft, etc.

- 1) and Press the "Stop" button and "Water pressure adjustment +" button at the same time for about 10 seconds or longer.


##### To turn the power "OFF"

Unplug the power plug.

- ▶ The "Power" LED is unilluminated.


### 3. Open the shutoff valve

#### 3.1 Remove the shutoff valve cover.

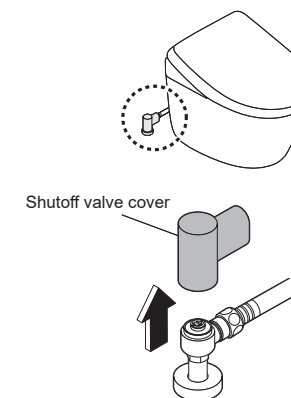


#### 3.2 Fully open the shutoff valve.

Opening / closing tool (accessory)\*1  
or flat-head screwdriver

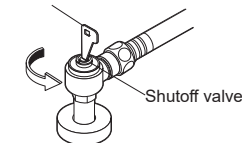

#### 3.3 Install the shutoff valve cover.

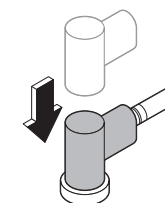

\*1 Use the supplied opening/closing tool.

# Основные операции

## Mechanism of Auto Functions

"EWATER+" is used automatically to clean the wand and bowl unit.


### 1. As you approach



Auto open / close  
Auto bowl CLEAN  
Instant heated seat

Auto open / close

The toilet lid opens

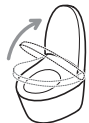

When the toilet is used in standing position

Open the toilet seat with the remote control.

Auto bowl CLEAN

Pre-mist



The Bowl light lights up

A mist is automatically sprayed inside the bowl unit to make it more difficult for dirt to adhere.

Instant heated seat



Warming starts from the standby temperature.

### 2. As you sit\*1



Deodorizer  
Instant heated seat

Deodorizer

Starts the deodorizer



Removing odors inside the bowl unit.

**Note:** Deodorizing filter needs regular maintenance. (→Page 53)

Instant heated seat



Warms to the set temperature

### 3. As you stand up



Auto power deodorizer  
Auto flushing  
Auto wand CLEAN

Auto power deodorizer

After about 10 seconds

Starts the auto power deodorizer




It stops about 60 seconds after you stand up from the toilet seat

Auto flushing

After about 10 seconds

The toilet flushes\*2

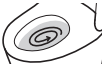

**Note:** The flushing varies depending on how long you sit on the toilet seat.

- Performs a light flush if the time is about 6 to 30 seconds.
- Performs a full flush if the time is about 30 seconds or longer.

Auto wand CLEAN

Only when the washing functions are used

After about 25 seconds

The wand extends to clean with the "EWATER+" that comes out of the base\*3



The Bowl light lights up

**Note:** "EWATER+" can also be used by pressing the remote control button. (→Page 20 "Wand CLEAN")

### 4. As you move away

When you move away



Auto flushing  
Auto open / close  
Auto bowl CLEAN  
Auto underseat CLEAN  
Instant heated seat

When the toilet is used in standing position

Auto flushing

The toilet flushes\*2



Performs a light flush.

Auto open / close

The toilet lid and toilet seat close\*2



Auto bowl CLEAN  
Auto underseat CLEAN

When you move away

After-mist\*4



The Bowl light lights up

EWATER+ mist is sprayed on the bowl unit and underneath the front of the toilet seat.\*5

**Note:** "EWATER+" can also be used by pressing the remote control button. (→Page 49 "Manual Spray")

Auto open / close\*6

The toilet lid closes\*2



Instant heated seat



Returns to the standby temperature

Operation under the default settings is described in "Mechanism of Auto Functions".

These mechanisms be changed. (→Pages 26–45 "Changing Settings")

What is meant by "EWATER+" ?

"EWATER+" helps the self-cleaning wand feature work effectively and by preventing the accumulation of dirt that can cause stains.

- "EWATER+" is generated from chemicals already present in potable water.
- "EWATER+" helps to minimize dirty surfaces, but does not make cleaning unnecessary.
- The effect of rinsing with "EWATER+" can vary depending on the frequency of toilet use and other conditions.

\*1 Water comes out from the area around the wand for several seconds while water is warmed up.

\*2 You can change to the setting that closes the toilet lid before flushing the bowl unit. (→Pages 30, 31)

\*3 When the washing functions (Rear washing and Front washing etc.) have not been used in 8 hours, the wand is cleaned automatically. (Water comes out from around the wand.)


\*4 Mist is sprayed on the bowl unit and underneath the front of the toilet seat that gets dirty easily. If the toilet lid is closed, it is opened to spray mist. (If you do not want to open the toilet lid when spraying mist) (→Page 68)

\*5 When the washing feature (Rear washing and Front washing etc.) is not used for about 8 hours, mist is sprayed on the bowl unit automatically.

\*6 When you do not sit on the toilet seat, or when you sit on it or stand in front of the bowl unit briefly, it takes about 5 minutes before the lid closes automatically.

# Основные операции

## Mechanism of Auto Functions

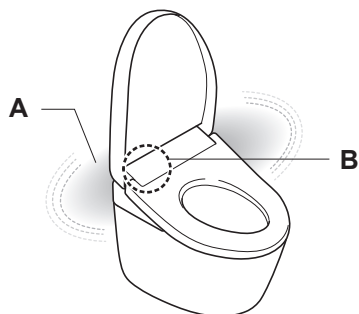

### A Soft light

Lighting up the inside of the bathroom with a soft light.

It lights up as you approach the bowl unit and goes off after you move away from the unit and a certain time has passed.


**Note:** You can turn "Soft light" ON or OFF. (→Page 39)

#### Night light

You can change "Soft light" and "Bowl light" to "Night mode", a lighting mode suitable for night. (→Page 38)

### B CLEAN indicator


Lights to show that the "Auto bowl CLEAN", "Auto underseat CLEAN", "Deodorizer", "Auto wand CLEAN", and "Manual spray" functions are operating.

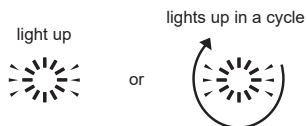





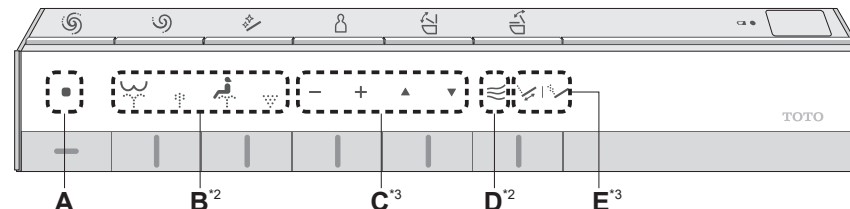

Lights only when the toilet seat is not in-use\*1

**Note:** You can turn "CLEAN indicator" ON or OFF. (→Page 40)

## Using the Remote Control






Operate the controls on the remote control; a beep sounds when the top unit receives the signal.

- A**  **Stop**  
Stops the B or D operation.
- B**  **Rear washing**  
Washes your rear.  
 **Rear soft washing**  
Washes your rear with soft embracing water flow.
-  **Front washing**  
Serves as a bidet for ladies.  
 **Wide front washing**  
Gently washes a wide area.
- C**  **Water pressure adjustment**  
You can adjust the water pressure to one of five levels.  
[-] Softer, [+] Stronger
-  **Wand position adjustment**  
You can adjust the washing position to 5 different points between the front and the rear, using the [▲] and [▼] buttons.


Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while, not exceeding a maximum of 5 minutes.

If you do not want to return to 3rd position (→Page 43)

**Note:** Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

- D**  **Warm air drying**  
Dries your rear.
- E**  **Oscillating washing**  
The wand moves back and forth to washes your rear thoroughly.  
 **Pulsating washing**  
Washes with the water pressure pulsating between soft and strong.

The washing mode changes each time you press the button.

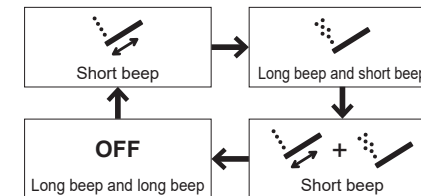

**Note:** Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.


\*1 Except "Manual spray"

\*2 This cannot be used if the seat sensor is not working. Sit down so that the seat sensor touches your skin directly. (→Page 9)

\*3 While using B, these buttons and their functions can be operated.


# Основные операции

## Using the Remote Control (Continued)

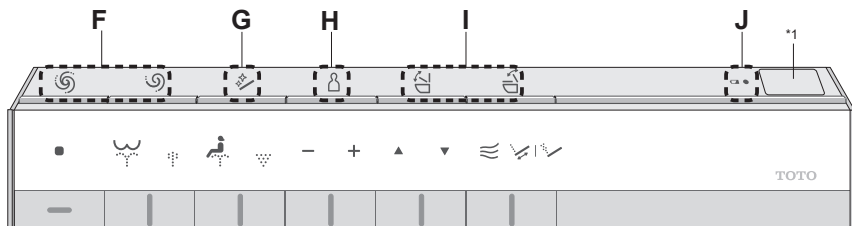




### Remote control back side

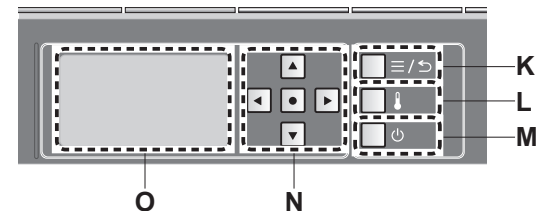 
How to remove the remote control (→Page 14)





Operate the controls on the remote control; a beep sounds when the top unit receives the signal.




- F**  **Full flush<sup>\*2</sup>**  
Performs a full flush.  
Up to 33 ft (10 m) of toilet paper (single)
-  **Light flush<sup>\*2</sup>**  
Performs a light flush.  
Up to 10 ft (3 m) of toilet paper (single)

 

- G**  **Wand CLEAN**  
Cleans the wand with "EWATER+"<sup>\*3</sup>  
After wand cleaning, water comes out from around the wand.  
*Note: This function will operate automatically after using the washing functions (Rear washing, Front washing, etc.). (→Pages 17, 35 "Auto wand CLEAN")*  
*Note: To clean the wand with it extended. (→Page 52 "Wand cleaning")*

- H**  **Personal setting**  
Up to four people can register their preferred "Water pressure", "Wand position" and "Warm water temperature" settings. (→Pages 43, 44)  
**To use**  
1) Press the button and check the beep sound to select the register number.  
REGISTER1: One short beep  
REGISTER2: Two short beeps REGISTER3: Three short beeps REGISTER4: Four short beeps  
2) Press the wash button you want to use ("Rear washing", etc.)

- I**  **Opening and closing the toilet lid**  
Opens and closes the toilet lid.
-  **Opening and closing the toilet seat**  
Opens and closes the toilet seat.

- J**  **Low battery warning LED**  
(→Page 58)

- K**  **"Menu, Return" button**  
Adjust settings  
Return to the previous menu
- L**  **"Temperature adjustment" button**  
Adjust temperatures (→Pages 24, 25)
- M**  **"Power ON/OFF" button**  
Pressing it about 3 seconds or longer turns the power on/off.  
▶ If the remote control is secured to prevent theft (→Page 15 2-2.2)

- N**  **SELECT keys**  
Select settings.
-  **Enter button**
- O** **Display screen**

\*1 Remote control transmitter

\*2 You can change to the setting that closes the toilet lid before flushing the bowl unit. (→Pages 30, 31)

\*3 What is meant by "EWATER+"? (→Page 17)