

TOTO

TOTO RUSSIA

Warranty Registration and Inquiry
For product warranty registration, TOTO U.S.A. Inc. recommends On-Line Warranty Registration. Please visit our web site <http://www.totousa.com>. If you have questions regarding warranty policy or coverage, please contact TOTO U.S.A. Inc., Customer Service Department, 1155 Southern Road, Morrow, GA 30260 (888) 295 - 8134 or (678) 466 - 1300 when calling from outside of U.S.A.

- You are advised to record the following information to allow quick service.

Date of purchase :	Name of shop :
Date : year month day	



www.toto-msk.ru

+7 (926) 001-10-03

 
service_toto@mail.ru

TOTO

NEOREST LS НАСТРОЙКИ

Настройки

If the water does not flow due to a power outage. (→Page 56)



NEOREST

SN8732M (MS8732CUMFG)



Благодарим вас за покупку данного изделия. Пожалуйста, ознакомьтесь с прилагаемой информацией, чтобы обеспечить безопасное использование изделия. Обязательно прочитайте данное руководство по эксплуатации перед использованием изделия и храните его в надежном месте для дальнейшего использования.


Регулировка температуры

Warm Water, Toilet Seat, Drying

Five different temperature levels from high to low and "OFF" can be set.

Remote control back side

How to remove the remote control (→Page 14)

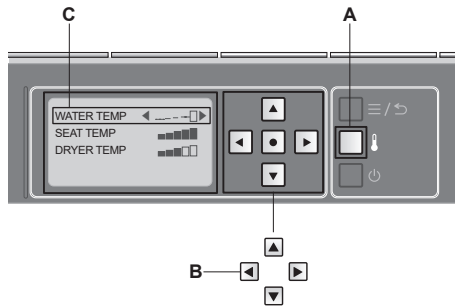


- A "Temperature adjustment" button
- B SELECT keys
Select a setting
- C Displays the temperature level

Note: During setting, the display goes out when no button is pressed within about 60 seconds.
If you fail to complete the setting, redo from the step 1.

Warm water temperature

 1. Press the "Temperature adjustment" button.
2. Use the "SELECT keys" to select [WATER TEMP].



3. Use the "SELECT keys" to select the temperature level.

 


Note: If you want to turn it OFF, press the SELECT key until [OFF] appears

Settings complete

Toilet seat temperature

1. Press the "Temperature adjustment" button.
2. Use the "SELECT keys" to select [SEAT TEMP].



3. Use the "SELECT keys" to select the temperature level.



Note: If you want to turn it OFF, press the SELECT key until [OFF] appears.

▶ When seat temperature is OFF, the seat LED is unilluminated.

 
Settings complete

If adjusting the temperature does not warm up the toilet seat.

▶ Is the energy saver set to "ON"? (→Page 28)

Drying air temperature

1. Press the "Temperature adjustment" button.
2. Use the "SELECT keys" to select [DRYER TEMP].



3. Use the "SELECT keys" to select the temperature level.



Note: The "Drying" cannot be turned "OFF".

Settings complete

*1 To prevent condensation, the water temperature does not drop below 68 °F (20 °C) even when set to "OFF".

Изменение настроек


Setting List

Setting Types	Available Settings Bold: Initial settings
Auto energy saver+ (→Page 29)	ON/OFF
Timer energy saver (→Page 29)	6H/9H/OFF
Auto flushing (→Page 30)	ON/OFF
Auto flush lid closed (→Page 30)	ON/OFF
Auto flush delay (→Page 32)	SET1/SET2/SET3
Auto open / close (→Page 32)	ON/OFF
Auto close delay (→Page 33)	SET1/SET2
Auto open delay (→Page 34)	SET1/SET2/SET3
Seat/lid (→Page 34)	Lid/Seat-Lid
Auto wand CLEAN (→Page 35)	ON/OFF
Auto bowl CLEAN (→Page 36)	ON/OFF
Auto underseat CLEAN (→Page 36)	ON/OFF
Deodorizer (→Page 37)	ON/OFF
Auto power deodorizer (→Page 37)	ON/OFF
Night light (→Page 38)	ON/STANDBY/TIMER
Soft light (→Page 39)	ON/OFF
Bowl light (→Page 39)	ON/OFF
CLEAN indicator (→Page 40)	ON/OFF
Language settings (→Page 40)	Simplified Chinese/Traditional Chinese/English
Anti freezing (→Page 41)	ON/OFF
Beep sound (→Page 42)	ON/OFF
Lower water level (→Page 42)	-
Pressure/position setting (→Page 43)	ON/OFF
Personal setting (→Page 43)	ON/OFF
Registering Personal Settings (→Page 44)	Register 1/Register 2/Register 3/Register 4
Sensor detection range (→Page 45)	SET1/SET2/SET3/SET4/SET5

Setting with buttons on the back of the remote control.

Remote control back side

How to remove the remote control (→Page 14)

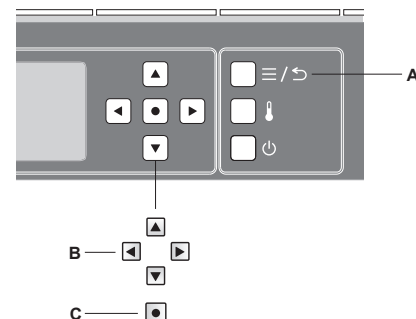

A "Menu, Return" button

B SELECT keys

C Enter button


Note: During setting, the display goes out when no button is pressed within about 60 seconds.
If you fail to complete the setting, redo from the step 1.

Изменение настроек

The energy saver features

"Auto energy saver+" or "Timer energy saver" can be selected. You can save energy by turning the toilet seat heater "OFF".

Note: Even if the energy saver feature is on (i.e., the toilet seat heater is "OFF"), the seat temporarily becomes warm when approaching the bowl unit or when sitting on the toilet seat. (It takes about 60 seconds to reach the setting temperature.)

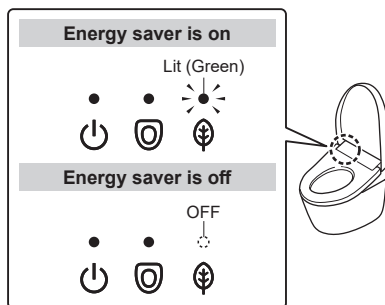


Auto energy saver+

You want the product to save energy automatically

The product detects time periods with no use and turns the toilet seat heater OFF automatically.

"Auto energy saver+" takes about 10 days to detect time periods in which the toilet seat is never used.

Example

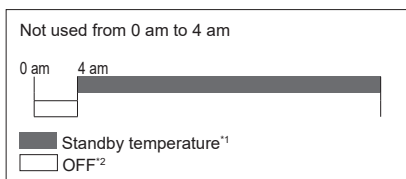


Timer energy saver and Auto energy saver+

You want to save more energy

When both "timer energy saver" and "Auto energy saver+" are set, "Auto energy saver+" operates when "timer energy saver" is not operating.

Example

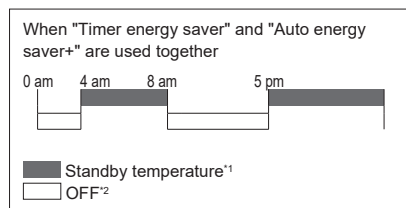


Timer energy saver

You want to save energy only for a preset duration of time. (6 hours, 9 hours)

Once the time is set, the toilet seat heater turns off automatically during the set time period every day.

Example

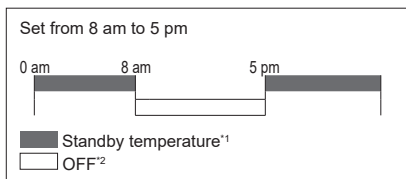


*1 The time period when the toilet seat heater is set to a "standby temperature".

*2 The time period when the toilet seat heater is set to a "OFF".


How to Set

Auto energy saver+

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [ENERGY SAVER].




- Press the "Enter" button.

 
3. Use the "SELECT keys" to select [AUTO ENERGY SAVER].



 4. Use the "SELECT keys" to select [AUTO ENERGY SAVER+].³



- Press the "Enter" button.

 


(To return)

Timer energy saver


Set the "Timer energy saver" at the time you want to start it

Example: To save energy from 1 am to 7 am (for 6 hours)

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [ENERGY SAVER].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [TIMER SAVER].




- Press the "Enter" button.

 4. Use the "SELECT keys" to select [6H], [9H], or [OFF].



- Press the "Enter" button.

 

(To return)

To change the timer energy saver time

► Set the timer energy saver again at the time you want to start it.

 
*3 [AUTO ENERGY SAVER] is displayed but cannot be set.

Изменение настроек


Auto flushing

Set whether or not to clean the bowl unit automatically

1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].



Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO FLUSH].



Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO FLUSH].



5. Use the "SELECT keys" to select [ON] or [OFF].



Press the "Enter" button.




(To return)


Auto flush lid closed

Set whether or not to close the toilet lid automatically before flushing the bowl unit

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO FLUSH].




Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO FLUSH LID CLOSED].



 5. Use the "SELECT keys" to select [ON] or [OFF].



Press the "Enter" button.

 

(To return)

About "Auto flush lid closed"...

About 10 seconds after you stand up or move away if you use the toilet in standing position, the toilet lid closes automatically before flushing the bowl unit.

Also, if you press the Flush buttons ("Full flush" or "Light flush") on the remote control, the toilet lid closes before flushing the bowl unit.

Using the toilet seat



Stand up

The toilet lid closes in about 10 seconds.
▶ The toilet lid closes before flushing the bowl unit.

Using the toilet in standing position



Move away

The toilet seat and lid close when you move away.
▶ The toilet seat and lid close before flushing the bowl unit.*1

Using the flush buttons on the remote control



The toilet lid closes.
▶ The toilet lid closes before flushing the bowl unit.

"Auto flush lid closed" does not work if "Auto flushing" and "Auto open / close" are set as below: (Except when using the Flush buttons on the remote control)

	Auto flushing	Auto open / close
1)	OFF	ON
2)	ON	OFF
3)	OFF	OFF

- 1) The toilet lid closes automatically but the bowl unit does not flush.
- 2) The bowl unit flushes automatically but the toilet lid does not close.
- 3) The toilet lid does not open / close and the bowl unit does not flush automatically.

Turn both "Auto flushing" and "Auto open / close" ON. (→Pages 30, 32)

Even if "Auto flushing" is turned ON, "Auto flush lid closed" may not work in some cases. For details, refer to "Auto flush lid closed" does not work" in "Troubleshooting". (→Page 70)

Note: You can change the length of time before water flushes after closing the toilet lid automatically to [SET 1], [SET 2], or [SET 3]. (→Page 32)

If you get up slightly from the seat or sit leftward on the seat while seated on it, the seat sensor may not detect properly, which results in the toilet lid being closed and bowl unit being flushed. Sit down so that the seat sensor touches your skin directly. (→Page 9)

While using the toilet in standing position, the toilet lid may close and the bowl unit may be flushed. Stand straight in front of the bowl unit.

 
*1 The toilet seat and lid close in about 30 seconds and then the bowl unit flushes.

Изменение настроек


Auto flush delay^{*1*2}

Change the amount of time before the toilet flushes automatically

1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO FLUSH].



- Press the "Enter" button.

 4. Use the "SELECT keys" to select [AUTO FLUSH DELAY].




5. Use the SELECT keys to select [SET 1], [SET 2], or [SET 3].



SET 1 (Short) : After about 5 seconds
SET 2 (Standard): After about 10 seconds
SET 3 (Long) : After about 15 seconds

If "Auto flush lid closed" is turned ON, the toilet lid closes before flushing the bowl unit as above.

 - Press the "Enter" button.




(To return Press the "Menu, Return" button.)


Auto open / close

Set whether or not to open and close the toilet lid automatically

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO OPEN / CLOSE].



- Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO OPEN / CLOSE].



5. Use the "SELECT keys" to select [ON] or [OFF].^{*3}



 - Press the "Enter" button.




(To return Press the "Menu, Return" button.)


Auto close delay^{*4*5}

Change the amount of time before the lid/seat closes automatically

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO OPEN / CLOSE].



- Press the "Enter" button.

 4. Use the "SELECT keys" to select [AUTO CLOSE DELAY].




5. Use the "SELECT keys" to select [SET 1] or [SET 2].^{*6}



SET 1 (Short) : After about 25 seconds
SET 2 (Standard): After about 90 seconds

 - Press the "Enter" button.



(To return Press the "Menu, Return" button.)

*1 This operation cannot be performed if "Auto flushing" is turned OFF.

*2 The length of time specified for "Auto close delay (Auto flush lid closed)" if "Auto flush lid closed" is turned ON.

*3 Even if this function is turned OFF, the toilet lid opens before spraying mist for "Auto underseat CLEAN" and closes after completion. (If you do not want to open the toilet lid when spraying mist. →Page 68)

*4 This operation cannot be performed if "Auto open / close" is turned OFF.

*5 If "Auto flush lid closed" is turned ON, you cannot use this setting to change the length of time before closing the toilet lid automatically. Configure the settings for "Auto flush delay". (→Page 32)

 
*6 When set to [SET 1], the lid/seat does not open automatically for about 15 seconds after closing automatically.

Изменение настроек


Auto open delay*1

Change the time period till automatic opening
(After closing by hand or remote control.)

1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO OPEN / CLOSE].




- Press the "Enter" button.

 4. Use the "SELECT keys" to select [AUTO OPEN DELAY].




 5. Use the "SELECT keys" to select [SET1], [SET2], or [SET3].



SET 1 (Short) : After about 15 seconds
SET 2 (Middle) : After about 30 seconds
SET 3 (Long) : After about 90 seconds

 - Press the "Enter" button.




(To return Press the "Menu, Return" button.)


Seat/lid*1

Automatically open and close the toilet lid/
Automatically open and close the toilet seat
and toilet lid

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].



- Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO OPEN / CLOSE].




- Press the "Enter" button.


4. Use the "SELECT keys" to select [SEAT / LID].



 5. Use the "SELECT keys" to select [LID] or [SEAT · LID].*2*3



- Press the "Enter" button.

 


(To return Press the "Menu, Return" button.)


Auto wand CLEAN

Set whether or not to clean the wand automatically

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO CLEANING].




- Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO WAND CLEAN].



 5. Use the "SELECT keys" to select [ON] or [OFF].



- Press the "Enter" button.

 

(To return Press the "Menu, Return" button.)

*1 This operation cannot be performed if "Auto open / close" is turned OFF.

*2 When the [SEAT · LID] are set to open automatically, pre-mist is not sprayed.

 
*3 When [SEAT · LID] are set, a light flush may be performed even if you do not stand and use it, depending on the layout of your toilet.

Изменение настроек


Auto bowl CLEAN*1

Set whether or not to spray mist in the bowl unit automatically

1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO CLEANING].




Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO BOWL CLEAN].



 5. Use the "SELECT keys" to select [ON] or [OFF].



Press the "Enter" button.

 


(To return Press the "Menu, Return" button.)


Auto underseat CLEAN*1

Set whether or not to spray mist to the back of the toilet seat automatically

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO CLEANING].




Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO UNDERSEAT CLEAN].



 5. Use the "SELECT keys" to select [ON] or [OFF].



Press the "Enter" button.

 


(To return Press the "Menu, Return" button.)


Deodorizer

Set whether or not to deodorize automatically after sitting on the toilet seat

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO CLEANING].




Press the "Enter" button.

 
4. Use the "SELECT keys" to select [DEODORIZER].



 5. Use the "SELECT keys" to select [ON] or [OFF].



Press the "Enter" button.

 


(To return Press the "Menu, Return" button.)


Auto power deodorizer

Set whether or not to power deodorize automatically after standing up

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [AUTO CLEANING].




Press the "Enter" button.

 
4. Use the "SELECT keys" to select [AUTO POWER DEODORIZER].



 5. Use the "SELECT keys" to select [ON] or [OFF].



Press the "Enter" button.

 

(To return Press the "Menu, Return" button.)

*1 If "Auto bowl CLEAN" is turned OFF, the mist for "Auto underseat CLEAN" is not sprayed.

 
Изменение настроек

Night light


Set whether or not to change "Soft light" and "Bowl light" to "Night mode", a lighting mode suitable for night, as well as the time window.

To set the time window (timer), set the desired start time.

1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [LIGHT].



- Press the "Enter" button.

 
4. Use the "SELECT keys" to select [NIGHT MODE].



5. Use the "SELECT keys" to select [ON], [STANDBY], or [TIMER].



 - Press the "Enter" button.



(To return Press the "Menu, Return" button.)

About "Night light"...

You can change "Soft light" and "Bowl light" to "Night mode", a lighting mode suitable for night.

Note: The light does not turn on if "Soft light" and "Bowl light" are turned OFF.

The "Night light" is turned ON

Soft light

Lights permanently



Bowl light

Lights up only while someone is detected



The brightness changes according to human movement.

The "Night light" is turned OFF [STANDBY]

Soft light

Lights up as specified in the settings



Bowl light

Lights up as specified in the settings




The "Night light" is configured with the timer



The light turns ON / OFF [STANDBY] every 12 hours starting from the set time.


Example

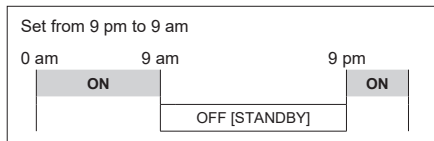


Soft light

Set whether or not to use the soft light

 1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].




- Press the "Enter" button.

 3. Use the "SELECT keys" to select [LIGHT].



- Press the "Enter" button.

 4. Use the "SELECT keys" to select [SOFT LIGHT].



5. Use the "SELECT keys" to select [ON] or [OFF].



- Press the "Enter" button.

 


(To return Press the "Menu, Return" button.)


Bowl light

Set whether or not to use the light inside the bowl unit

1. Press the "Menu, Return" button.




 2. Use the "SELECT keys" to select [AUTO FUNCTION].



- Press the "Enter" button.

 3. Use the "SELECT keys" to select [LIGHT].



- Press the "Enter" button.

 
4. Use the "SELECT keys" to select [BOWL LIGHT].



5. Use the "SELECT keys" to select [ON] or [OFF].



- Press the "Enter" button.




 
(To return Press the "Menu, Return" button.)



Изменение настроек

 
CLEAN indicator

Set whether or not to light up the CLEAN indicator



1.  Press the "Menu, Return" button.




2.  Use the "SELECT keys" to select [AUTO FUNCTION].





 
-  Press the "Enter" button.



3.  Use the "SELECT keys" to select [LIGHT].




-  Press the "Enter" button.

 
4.  Use the "SELECT keys" to select [INDICATOR].




5.   Use the "SELECT keys" to select [ON] or [OFF].




-  Press the "Enter" button.






(To return )

Language settings

 Select the language displayed on the back of remote control



1.  Press the "Menu, Return" button.

 


2.  Use the "SELECT keys" to select [语言 / 語言 / LANGUAGE].


 


-  Press the "Enter" button.

3.  Use the "SELECT keys" to select [中文简体], [繁體中文] or [ENGLISH].





-  Press the "Enter" button.

 




(To return )

Anti freezing

Set whether or not to run the water for the bowl unit and top unit automatically at a fixed interval in order to prevent freezing



1.  Press the "Menu, Return" button.

 




2.  Use the "SELECT keys" to select [OTHER SETTING].


 


-  Press the "Enter" button.

3.  Use the "SELECT keys" to select [ANTI FREEZING].






4.   Use the "SELECT keys" to select [ON] or [OFF].

 



<For setting to [ON]>

When the time is set, the bowl unit is cleaned in about 10 minutes intervals to prevent freezing.


-  Press the "Enter" button.

5.   Use the "SELECT keys" to select [YES].



-  Press the "Enter" button.




 
(To return )



Изменение настроек

Beep sound

Set whether or not to make a beep sound



1.  Press the "Menu, Return" button.

 




2.  Use the "SELECT keys" to select [OTHER SETTING].




-  Press the "Enter" button.

3.  Use the "SELECT keys" to select [BEEP].




4.   Use the "SELECT keys" to select [ON] or [OFF].




-  Press the "Enter" button.

 




(To return )

Lower water level

Lower the bowl unit water level
(For reducing water rebound, collecting a stool sample, etc.)



1.  Press the "Menu, Return" button.

 


2.  Use the "SELECT keys" to select [OTHER SETTING].




-  Press the "Enter" button.

3.  Use the "SELECT keys" to select [LOWER WATER LEVEL].




-  Press the "Enter" button.

The water in the bowl unit flows and accumulates at a low water level.


Settings complete

 
(To return )



Note: The water level returns normal when the toilet is flushed. Please set this function each time you want to lower the water level.

Pressure / position setting

Set whether or not to keep your favorite pressure and position settings



1.  Press the "Menu, Return" button.

 




2.  Use the "SELECT keys" to select [OTHER SETTING].


 


-  Press the "Enter" button.

 
3.  Use the "SELECT keys" to select [PRESSURE / POSITION SETTING].




4.   Use the "SELECT keys" to select [ON] or [OFF].



-  Press the "Enter" button.






(To return )

Personal setting

 Set whether or not to use the personal setting



1.  Press the "Menu, Return" button.

 


2.  Use the "SELECT keys" to select [OTHER SETTING].






 
-  Press the "Enter" button.



3.  Use the "SELECT keys" to select [PERSONAL SETTING].


 


-  Press the "Enter" button.

 
4.  Use the "SELECT keys" to select [SETTING].




5.   Use the "SELECT keys" to select [ON] or [OFF].



-  Press the "Enter" button.




(To return )

Изменение настроек

Registering Personal Settings

Register your preferred wand position, etc.

 1. Press the "Menu, Return" button.




2. Use the "SELECT keys" to select [OTHER SETTING].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [PERSONAL SETTING].




Press the "Enter" button.

 4. Use the SELECT keys to select the desired register number from [REGISTER1], [REGISTER2], [REGISTER3] or [REGISTER4].



Press the "Enter" button.

 5. Use the "SELECT keys" to select [PRESSURE].




Use the "SELECT keys" to select the "level".

6. Use the "SELECT keys" to select [POSITION].




Use the "SELECT keys" to select the "level".

 7. Use the "SELECT keys" to select [WATER TEMP].



Use the "SELECT keys" to select the "level".

 8. Press the "Enter" button.




(To return)

Sensor detection range

You can change when to open the toilet lid upon entering the bathroom

 1. Press the "Menu, Return" button.




2. Use the "SELECT keys" to select [OTHER SETTING].




Press the "Enter" button.

 3. Use the "SELECT keys" to select [SENSOR DETECTION RANGE].



 
4. Use the "SELECT keys" to select [SET1], [SET2], [SET3], [SET4] or [SET5].



(Example) When to open the toilet lid upon entering the bathroom.



 Press the "Enter" button.



(To return)